


FS1611

EXPLODED VIEW

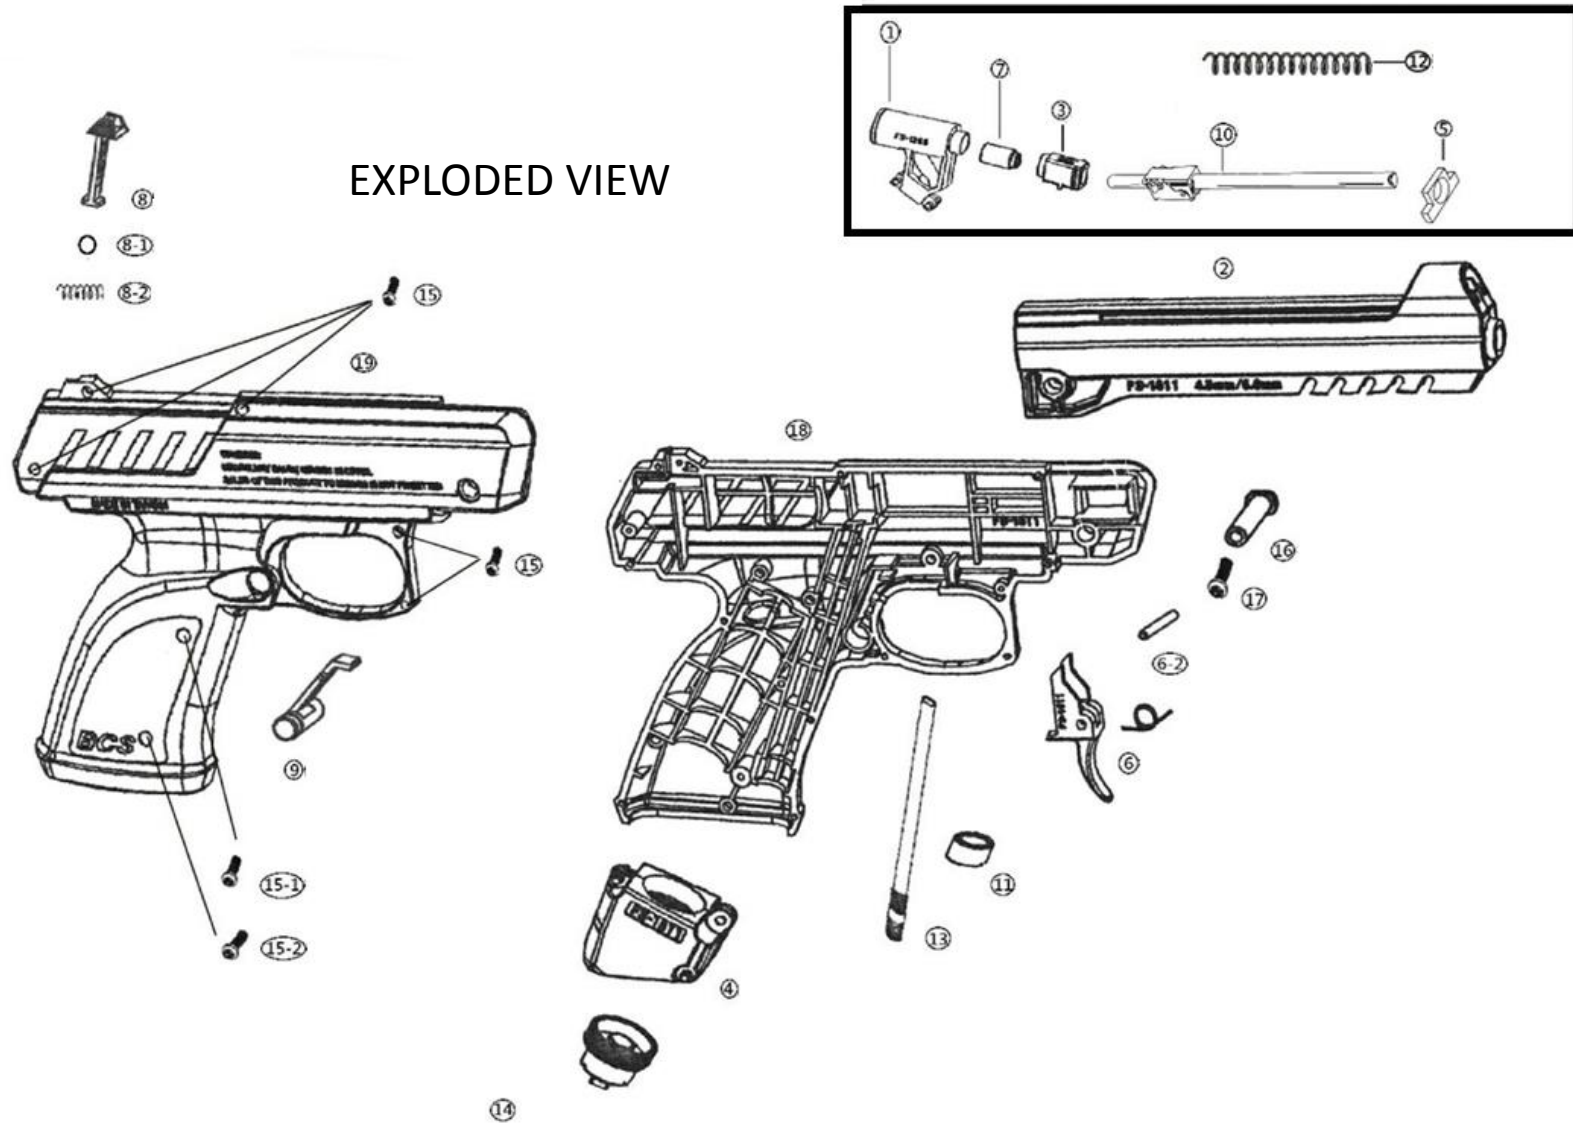

Parts

| | |
|-------|-----------------------------|
| 1. | Chamber |
| 2. | Barrel |
| 3. | Projectile Chamber |
| 4. | Bottom |
| 5. | Barricade |
| 6. | Trigger & Twist Spring |
| 6-2. | Trigger Pin |
| 7. | Outlet Hammer |
| 8. | Rear Sight |
| 8-1. | Rear Sight Catch Steel Ball |
| 8-2. | Rear Sight Catch Spring |
| 9. | Safety Kit |
| 10. | Barrel Kit |
| 11. | Magazine Locking Bottom |
| 12. | Spring |
| 13. | Tubular Spring |
| 14. | Cylinder Screw Kit |
| 15. | Frame Screw |
| 15-1. | Frame Screw |
| 15-2. | Frame Screw |
| 16. | Barrel Locking Axis |
| 17. | Locking Axis Screw |
| 18. | Left Frame |
| 19. | Right Frame |

