


F18

EXPLODED VIEW

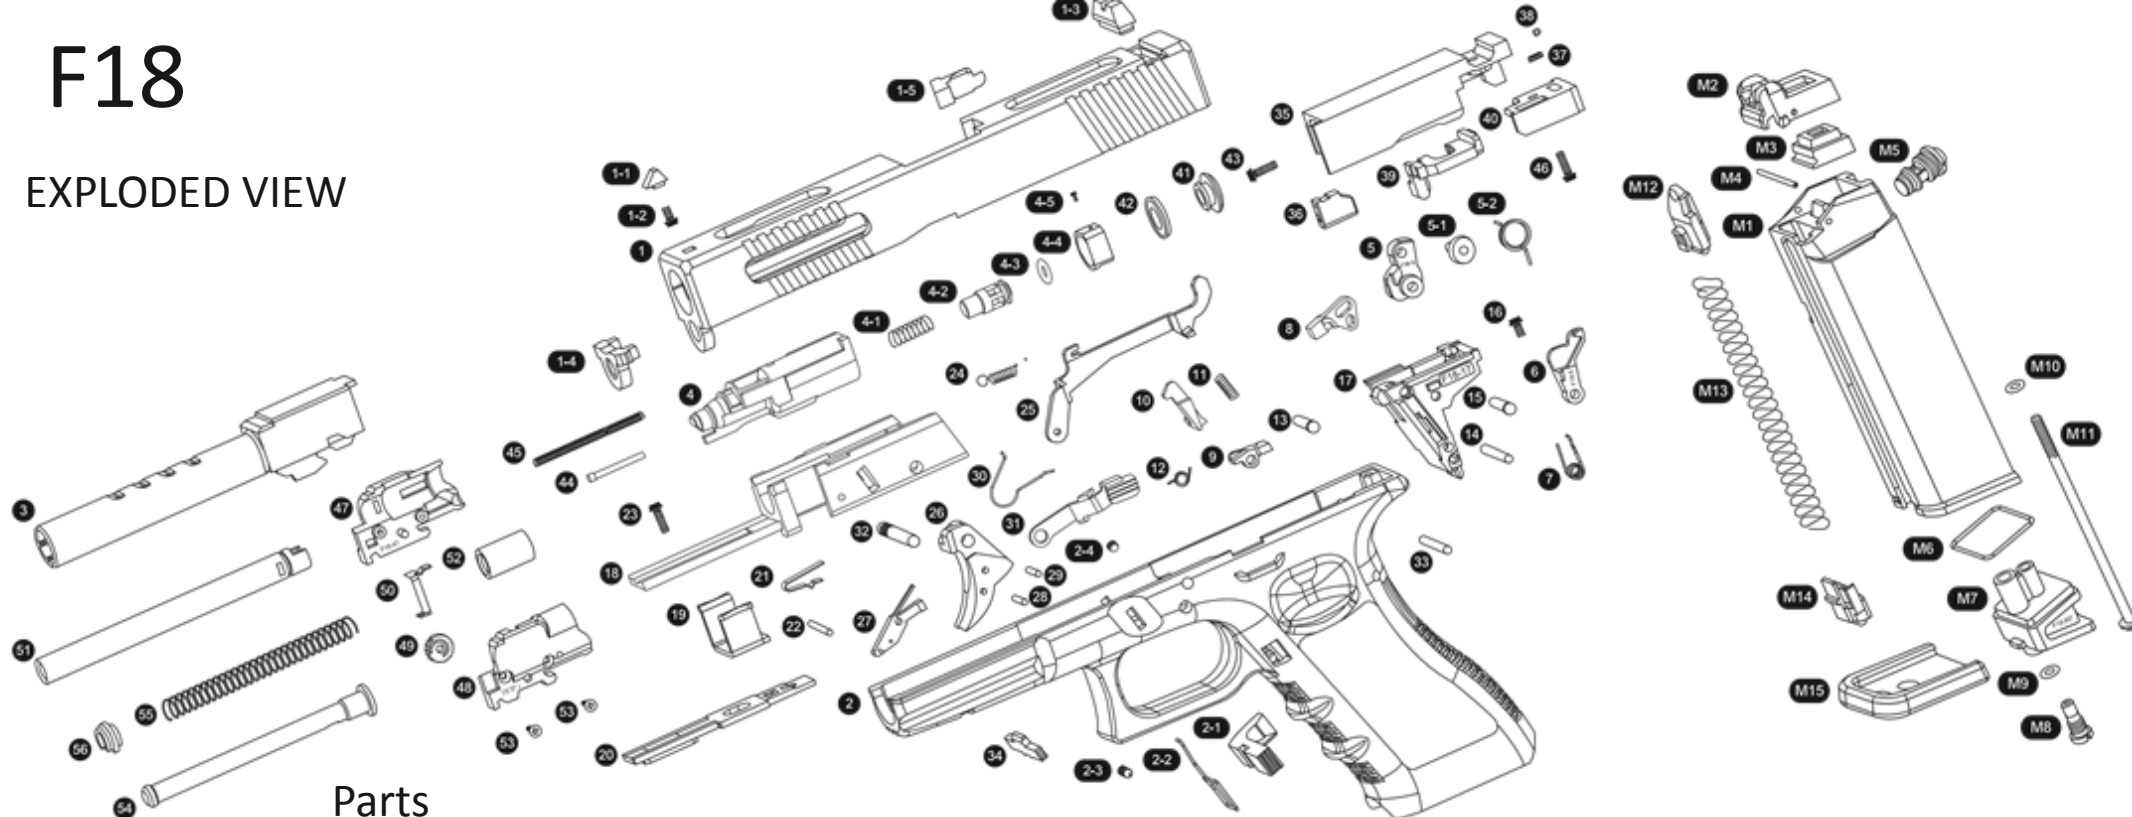

Parts

1.	Slide	4-4.	Valve Back Cover	17.	Hammer Housing	33.	Hammer Housing Pin	49.	HOP Regulator Wheel	M9.	Preventive Leak Inflator O Ring
1-1.	Front Sight	4-5.	Back Cover Locking Screw	18.	Trigger Housing	34.	Slide Locking Slice	50.	Regulator Bar	M10.	Magazine Base Screw O Ring
1-2.	Front Sight Screw	5.	Hammer	19.	Steel Piece Rail	35.	Cylinder Housing	51.	Inner Barrel	M11.	Magazine Base Screw
1-3.	Rear Sight	5-1.	Hammer Cam	20.	Safety Slice	36.	Cylinder Gasket	52.	Rubber	M12.	Mag Cap
1-4.	Slide Buffer Part	5-2.	Hammer Twist Spring	21.	Safety Spring	37.	Locking Pin Spring	53.	HOP Housing Locking Screw	M13.	Magazine Spring
1-5.	Extractor Piece	6.	Hammer Plate	22.	Spring Pin	38.	Choosing Button Locking Pin	54.	Recoil Guide	M14.	Magazine Base Stopping
2.	Frame	7.	Plate Twist Spring	23.	Trigger Housing Screw	39.	Choice Button	55.	Recoil Spring	M15.	Magazine Bottom
2-1.	Magazine Catch	8.	Valve Firing Pin	24.	Bar Spring	40.	Cylinder Housing Back Cover	56.	Recoil Spring Locking Ring	M1L.	Gas Magazine L
2-2.	Mag Catch Spring	9.	Plate	25.	Trigger Bar	41.	Piston Block	M1.	Gas Magazine	M13L.	Magazine Spring L
2-3.	Frame Decorative Left Pin	10.	Firing Pin Locking Slice	26.	Trigger	42.	Piston Ring	M2.	Cap	M1C.	CO2 Magazine
2-4.	Frame Decorative Left Pin	11.	Locking Spring	27.	Trigger Safety	43.	Piston Block Screw	M3.	Outlet Rubber	C1.	CO2 Valve
3.	Outer Barrel	12.	Plate Spring	28.	Trigger Safety Pin	44.	Nozzle Bar	M4.	Cap Pin	C2.	CO2 Stopping Pin
4.	Nozzle	13.	Plate Pin	29.	Bar Pin	45.	Nozzle Spring	M5.	Gas Valve	C3.	Break Cylinder Needle Housing O Ring
4-1.	Valve Spring	14.	Plate Pin	30.	Slide Stopping Piece SPR	46.	Piston Block Locking Screw	M6.	Magazine Base O Ring	C4.	Break Cylinder Needle Housing
4-2.	Antifreeze Valve	15.	Hammer Pin	31.	Slide Stopping Piece	47.	HOP Housing Right Cover	M7.	Magazine Base	C5.	Gasket
4-3.	Valve O Ring	16.	Hammer Housing Screw	32.	Trigger Housing Pin	48.	HOP Housing Left Cover	M8.	Preventive Leak Inflator	C6.	Cylinder Screw Cover

