


# FS9911

## Parts

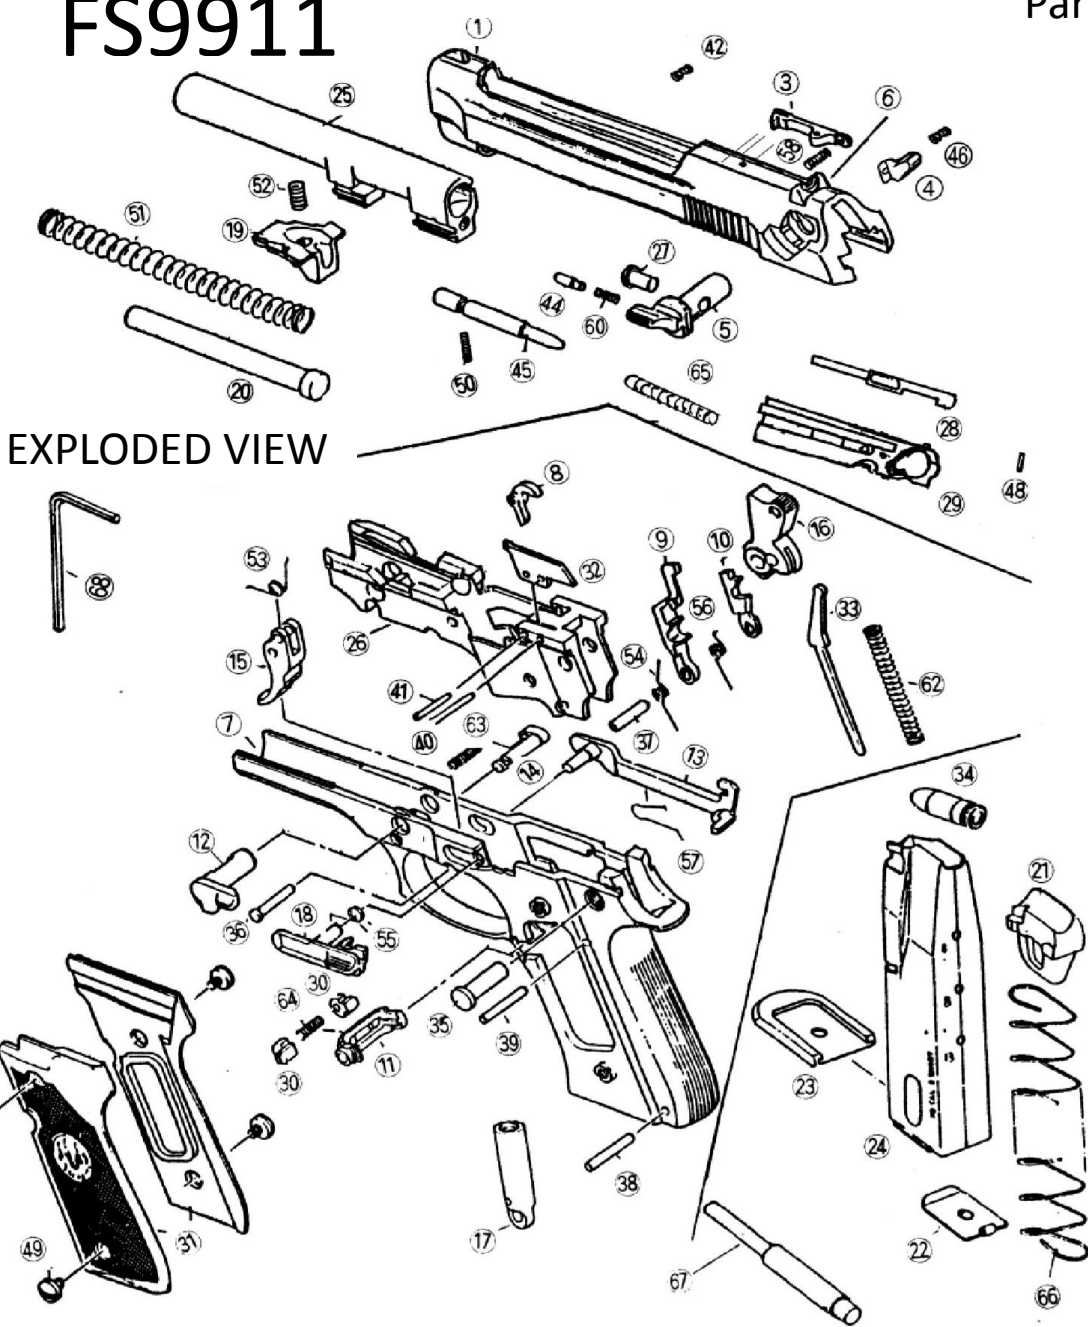

EXPLODED VIEW

1.	Slide	36.	Trigger Pin
2.		37.	Hammer Plate Axis
3.	Extractor	38.	Hammer Housing Pin
4.	Safety Locking Bar	39.	Hammer Plate Pin
5.	Safety Bar	40.	Cartridge Eject Barricade Pin
6.	Rear Sight	41.	Cartridge Eject Barricade Pin
7.	Frame	42.	Extractor Screw
8.	Action Bar	43.	
9.	Hammer Plate	44.	Safety Bar Pin
10.	Hammer Plate	45.	Barrel Sear
11.	Magazine Catch	46.	Safety Bar Locking Screw
12.	Slide Locking Bar	47.	
13.	Trigger Bar	48.	Firing Pin Locking Pin
14.	Locking Bar Button	49.	Grip Screw
15.	Trigger	50.	Sear Screw
16.	Hammer	51.	Recoil Spring
17.	Hammer Housing	52.	Moving Plate Spring
18.	Slide Catch	53.	Trigger Twist Spring
19.	Moving Plate	54.	Hammer Plate
20.	Recoil Bar	55.	Slide Catch Twist Spring
21.	Mag Follower	56.	Hammer Plate Twist Spring
22.	Magazine Spring Locking Piece	57.	Trigger Bar Twist Spring
23.	Magazine Bottom	58.	Extractor Spring
24.	Magazine	59.	
25.	Barrel	60.	Safety Spring
26.	Action Housing	61.	
27.	Priming Axis	62.	Hammer Spring
28.	Firing Pin	63.	Locking Bar Button Spring
29.	Firing Pin Housing	64.	Magazine Catch Spring
30.	Magazine Catch Piston	65.	Firing Pin Spring
31.	Grips	66.	Magazine Spring
32.	Cartridge Eject Barricade	67.	Kanecap Filler Rod
33.	Hammer Axis	68.	L Hex Head Wrench
34.	Shell	69.	
35.	Hammer Pin	70.	

